




Instruction Use For Preven-Co Nasal Aspirator




Components:

- a. Tubing
- b. Vacuum Plug
- c. Vacuum Plug O-Ring Seal
- d. Vacuum Extraction Cover
- e. Vacuum Extraction Cover O-Ring Seal
- f. Vacuum Extraction Connector
- g. Orifice for Vacuum Operating Valve
- h. Storage Tank
- i. Silicone Suction Cannula
- j. Orifice of Suction
- k. Suction Tubing Adapter

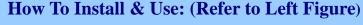

- 1. Connect tubing to cover vacuum extraction connector.
- 2. Connect the other end of tubing to suction tubing adapter's vacuum extraction connector.
- 3. Open vacuum pump/compressor's vacuum socket and plug vacuum plug into the vacuum socket.
- 4. Plug filtration cartridge into pressure air outlet of vacuum pump/Compressor as silencer.
- 5. Complete the installation of nasal aspirator with vacuum pump/compressor.
- 6. Switch on the power and position the silicone suction cannula near to nostril, press the orifice for vacuum operating valve by single finger to start the suction work.

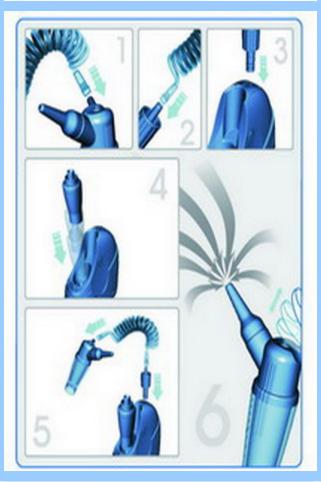

Cleaning And Maintenance:

- 1. Remove the filtration cartridge and suction tubing adapter from vacuum pump/compressor and disconnect two ends of tubing.
- 2. Discard all nasal secretions and mucus then clean all components (except tubing and filtration cartridge) with purified water and put them at cool place 1-2 hours for drying.
- **3.** For further sterilization, to steam all components (except tubing and filtration cartridge) with high temperature or put the components into boiled water boiling for 10 minutes.
- 4. Tubing and filtration cartridge don't need to sterilize, but, to replace the tubing every 3-6 months and filtration cartridge every two months is a suggestion.

Cautions:

- 1. The nasal aspirator is applicable for all aged users. But, for baby or younger children, the operation is suggested with the help of adult.
- 2. Don't suffocate the breath or swallow saliva during suction working and open the mouth to avoid unpleasant irritation of user's inner ear or eardrum.
- **3.** User can humidify nasal cavity with nasal irrigator prior to aspiration when the secretions are dry & thick.
- 4. One set of components for one user only. Do not share the components with other user to prevent transmitting flu. virus infection,
- 5. For keeping best effect on operation, to replace the components every 3-6 months is a suggestion.
- 6. The aspirator is for nasal aspirating only. Do not use it for other purposes.